

PARTS INCLUDED WITH EQUIPMENT

# INSTRUCTIONS

## lectern

- Turn the switch on the back of the speaker to the “**ON**” position

### Lectern Microphone

- Plug the microphone into the outlet on top of the lectern
- Plug the cord on the lectern into the outlet on the back of the speaker marked **MIC 2**

### Wireless Microphone

- Remove the protective sleeve and switch from “**OFF**” to “**PWR**”

Volume controls for both microphones are located on the back of the speaker

**When finished, please make sure the wireless microphone and speaker are turned off.**

### **VANCOUVER SHOWROOM INFO**

#50 - 3711 North Fraser Way  
Burnaby, B.C. V5J5J2  
(P) 604-324-7368  
(F) 604-324-6667  
Toll Free: 1-877-379-7368

### **SEATTLE SHOWROOM INFO**

4604 – 4<sup>th</sup> Avenue South  
Seattle, WA 98134  
(P) 206-749-5400  
(F) 206-749-5432  
Toll Free: 1-866-885-7368

The logo for Pedersen's, featuring the name in a stylized, cursive script font with a horizontal line underneath.

THE CELEBRATION EXPERTS  
VANCOUVER, B.C. - SEATTLE, WA  
[www.pedersens.com](http://www.pedersens.com)

### **AFTER HOURS EMERGENCY INFO**

Should an emergency arise after hours, please call your local Pedersen's office and your call will be directed to a staff member who can assist you.