



Popcorn Machine Operating Instructions

1. With all switches in the "OFF" position, connect the machine to the power supply.
2. Turn on popper "HEAT" (left) switch and red light will go on. Allow the kettle to preheat for 3-4 minutes
3. Prepare your popcorn and oil while the kettle preheats before proceeding with steps 4 to 6
4. When you are ready to pop corn, turn on "MOTOR" (middle) switch located in the top left corner of the popper. This will cause the agitator blades to rotate.
5. Raise the cover on the kettle and add oil followed immediately by the popcorn kernels. If you are using the "All in One" popcorn pouches squeeze the oil/butter from the bottom then add the kernels and salt
6. Close the cover on the kettle
7. As the corn pops, it will touch the cover and gradually raise it. Corn will spill over the edge into the cabinet.
8. When the corn stops popping turn "MOTOR" switch off so the blades stops
9. Dump the pan IMMEDIATELY by unhooking the handle from the screw.
When empty, return the pan to the popping position
10. If you are continuing to pop more corn then repeat steps 2 to 9

CAUTION Always shut OFF the HEAT when you are not popping corn. This will eliminate excess smoking.

To Turn OFF the Popper

1. On the last series of poppings, turn "OFF" the heat (left) switch shortly before the popping is completed.
2. When the pan has been dumped, return to popping position, close the cover, and turn "OFF" the motor (middle). This will stop smoking and keep excess oil from burning on the pan.
3. Turn off LIGHT (right) switch if you have turned on